

Split-Collar
Shelf Supports

SS4SC & SS5SC

SPLIT COLLAR SHELF SUPPORT
FOR A SYSTEM WITH FRONT AND REAR LEGS

1. Assemble the leg system as indicated in the accompanying Leg System Instructions.
2. Disassemble the foot from the bottom of the leg by removing the #10 set screw(s) with supplied hex wrench.
3. Assemble collars, gaskets, shelf, and wall bracket as shown in Fig. 1. Collars, gaskets, and shelf will slide UP from bottom of leg. Re-assemble foot. Position all set screws on collars and feet facing to the rear.

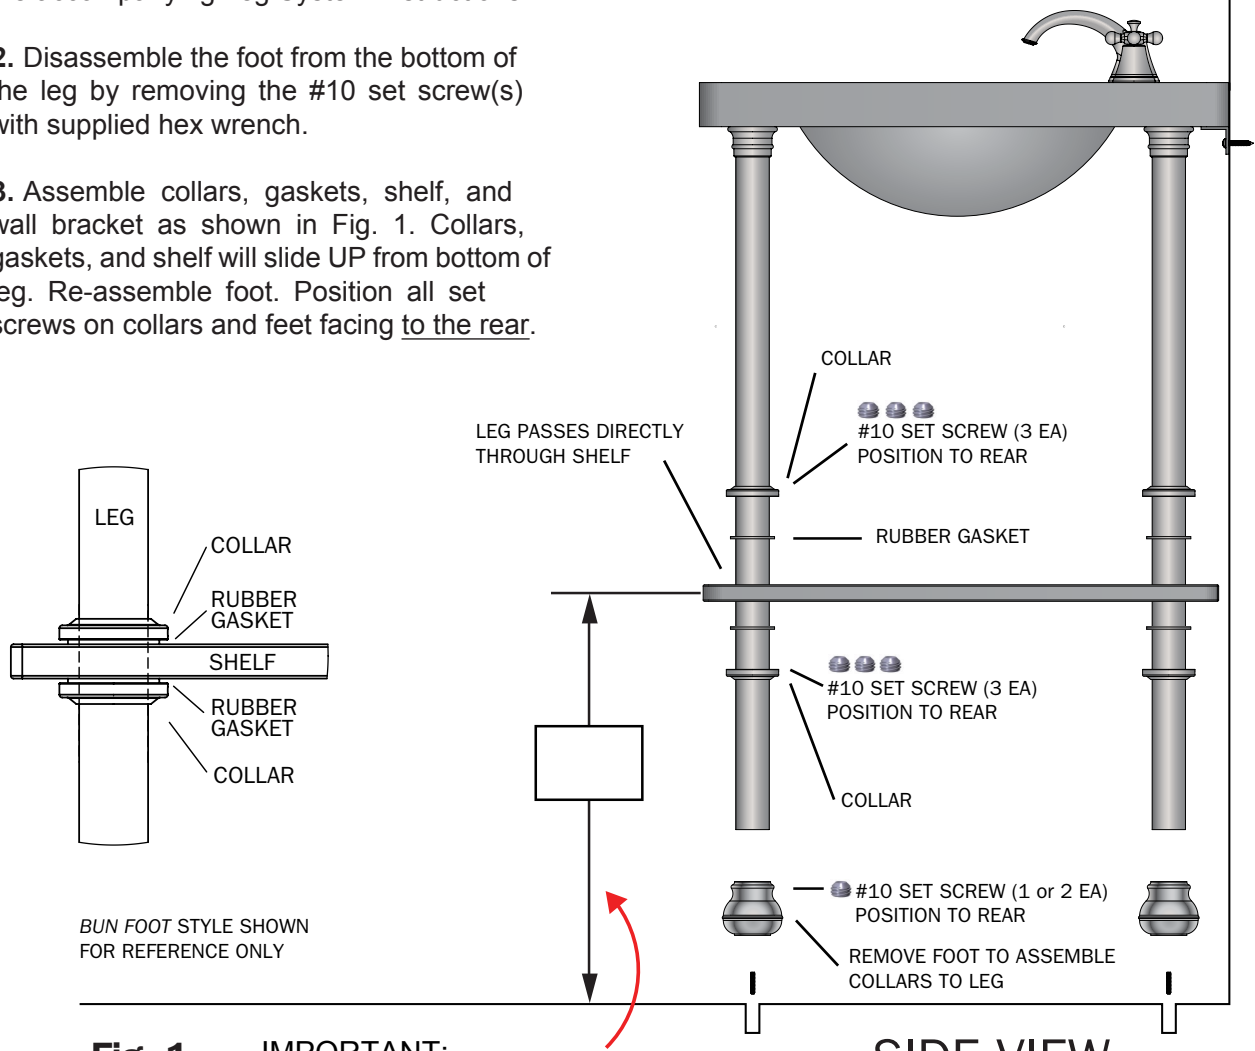


Fig. 1

IMPORTANT:
Locate center of shelf here, above floor.
Note: Leg is reinforced ONLY at this location ± 1-1/2"

SIDE VIEW

rev. 031020